


- Centre Drill
- Zentrierbohrer
- Centerboren
- Foret à centrer
- Brocas de Centrar
- Broca de Centrar



## A225

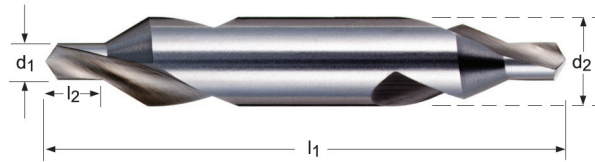

- 1.1 1.2 1.3 1.4 3.1 3.2
- 1.5 1.6 2.1 2.2 2.3 3.3 3.4 4.1 4.2 4.3 5.1 5.2 5.3 6.1 6.2 6.3 6.4 7.1 7.2 7.3
- 7.4 8.1 8.2 8.3 9.1

Nr.	$d_2$ Ø Inch /	$d_1$ Ø Inch /	$l_1$ Inch	$l_2$ max/min Inch	e-Code	Nr.	$d_2$ Ø Inch /	$d_1$ Ø Inch /	$l_1$ Inch	$l_2$ max/min Inch	e-Code
BS1	1/8	3/64	1.1/2	5/64 - 1/16	A225BS1	BS5	7/16	3/16	2.1/2	9/32 - 1/4	A225BS5
BS2	3/16	1/16	1.3/4	3/32 - 5/64	A225BS2	BS5A	1/2	7/32	2.3/4	5/16 - 9/32	A225BS5A
BS3	1/4	3/32	2.	5/32 - 1/8	A225BS3	BS6	5/8	1/4	3.	3/8 - 5/16	A225BS6
BS4	5/16	1/8	2.1/4	3/16 - 5/32	A225BS4	BS7	3/4	5/16	3.1/2	15/32 - 13/32	A225BS7