



# C346

**DORMER**

- Slot Drills
- Langlochfräser
- Spiebaanfrezen
- Fraises à rainurer
- Fresas Frontales
- Fresa de Topo de Ranhurar

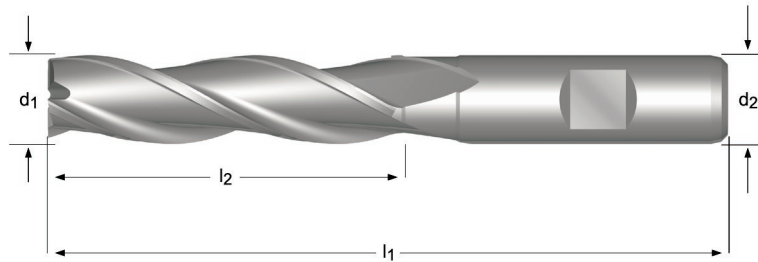

## C346



- 1.2 4.1 5.1 6.1 6.2 6.3
- 1.1 1.3 1.4 2.1 3.1 3.2 3.3 3.4 4.2 5.2 7.2 7.3 8.1

$d_1$ Ø mm	$d_2$ Ø mm	$l_2$ mm	$l_1$ mm	z	e-Code	$d_1$ Ø mm	$d_2$ Ø mm	$l_2$ mm	$l_1$ mm	z	e-Code
3,00	6	12	56	3	C3463.0	11,00	12	45	102	3	C34611.0
4,00	6	19	63	3	C3464.0	12,00	12	53	110	3	C34612.0
5,00	6	24	68	3	C3465.0	13,00	12	53	110	3	C34613.0
6,00	6	24	68	3	C3466.0	14,00	12	53	110	3	C34614.0
7,00	10	30	80	3	C3467.0	15,00	12	53	110	3	C34615.0
8,00	10	38	88	3	C3468.0	16,00	16	63	123	3	C34616.0
9,00	10	38	88	3	C3469.0	18,00	16	63	123	3	C34618.0
10,00	10	45	95	3	C34610.0	20,00	20	75	141	3	C34620.0