

K521

DORMER

• Toolbits



• Drehlinge

• Toolbits

• Barreaux rectifiés

• Cuchillas

• Buril

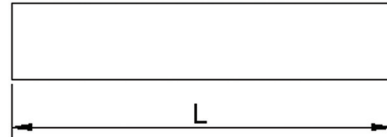

K521

HSCo



DIN
4964A



h9

- 1.1 1.2 1.3 1.4 3.1 3.2 3.3 3.4 6.1 6.2 6.3
- 1.5 2.1 2.2 6.4 7.1 7.2

A	L	e-Code	A	L	e-Code
3	100	K5213.0X100.0	12	200	K52112.0X200.0
4	80	K5214.0X80.0	14	100	K52114.0X100.0
4	100	K5214.0X100.0	14	160	K52114.0X200.0
5	100	K5215.0X100.0	15	100	K52115.0X100.0
5	160	K5215.0X160.0	16	100	K52116.0X100.0
6	100	K5216.0X100.0	16	160	K52116.0X160.0
6	160	K5216.0X160.0	16	200	K52116.0X200.0
6	200	K5216.0X200.0	18	160	K52118.0X160.0
8	100	K5218.0X100.0	18	200	K52118.0X200.0
8	160	K5218.0X160.0	20	200	K52120.0X200.0
8	200	K5218.0X200.0	3/16	4.	K5213/16X4
10	100	K52110.0X100.0	1/4	4.	K5211/4X4
10	160	K52110.0X160.0	5/16	4.	K5215/16X4
10	200	K52110.0X200.0	3/8	4.	K5213/8X4
12	100	K52112.0X100.0	1/2	4.	K5211/2X4
12	160	K52112.0X160.0	1/2	6.	K5211/2X6